

# Heating Thermostat Datasheet & Installation Instruction

HT01 Series 1. 0 Version

 



HT01series Heating Thermostat is applied for Water Heating System and Electric Heating System. We take high quality raw materials, and produce and inspect strictly so as to make products steady and precise. Simple shape and easy operation,HT01 will be your best choice.

## Specification

<b>Power Supply</b>	230 Vac $\pm$ 10%, 50/60 HZ	<b>Load</b>	Water Heating System 3A Electric Heating System 16A
<b>Room Temp. Range</b>	5~30 °C	<b>Accuracy</b>	$\pm$ 0.5°C
<b>Floor Over-heating Protection</b>	30~80°C		
<b>Internal Sensor</b>	NTC 10K	<b>Shell</b>	ABS+PC fire-resistant
<b>Floor Sensor</b>	NTC 10K		

## Do you need Holiday Mode?



When you are on holiday, want to be energy-saving meanwhile not to damage some equipment, please press **M** button to select  , then thermostat can run at your desired setting temperature


## Do you require Energy-saving Mode?



When the room is up-occupied, user wants to make room comfortable but energy-saving, please press button **M** to select  , then thermostat can run at your desired setting temperature

## Do you require Comfort Mode?



When the room is occupied, users wants desired comfortable, please press **M** to select  , then thermostat can run at your desired setting temperature

## Do you want to use Automatic Mode( 7 days separately Programmable)


# Heating Thermostat Datasheet & Installation Instruction


HT01 Series 1. 0 Version




Please press **M** to select  , Normal Mode and Energy-save Mode will be changed over automatically according to 7 days settings.

## How to set up Automatic Mode (7 days Separately Programmable)?

Every single ON/OFF pattern corresponds to 24 vertical squares of one day of week. Each square stands for one hour period. So, there is one On/off operation for each 60 minutes. Press  for 3 seconds, enter into programming

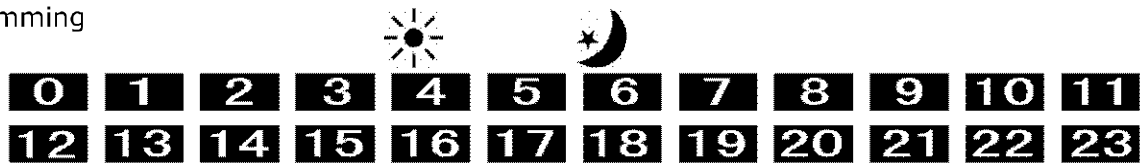

I. Press  to select week day, the top Numbers 1 to 7 is for Monday to Sunday.

II. Press  to select  or  mode on your desired patterns.

III. Press **+** **-** to set periods corresponding to Modes

All settings will be stored after 5 seconds.

### Clock correction

Press  for 3 seconds, and set Minute-Hour-Week by **+** **-** .

All settings will be stored after 5 seconds.

### Other setting

Press **M** for 3 seconds

#### 1. Temperature Calibration



Range: -8°C~8°C

Press **+** **-** to increase and decrease temp.

## 2. Sensor selection

rS

rS is Room Sensor

rS

FS is Floor Sensor

rFS

rFS is Room Sensor and Floor Sensor(Floor sensor is for over-heating protection)

## 3. If you choose rFS,

 


Current Floor Temp displays on LCD

# Heating Thermostat


## Datasheet & Installation Instruction

HT01 Series 1. 0 Version



Setting Over-heating protection temp and will display on LCD. If the floor temp. exceeds over-heating protection set-point, **ALARM!** will be flickering and heating output will be cut off.


### Wiring Diagram

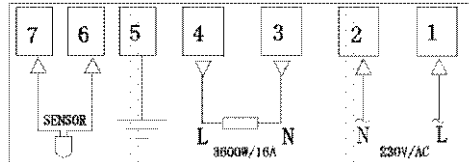


**WARNING: RISK OF ELECTRICAL SHOCK.** Disconnect power supply before making electrical connection. Contact with components carrying hazardous voltage can cause electrical shock and may result in severe personal injury or death.

### Mounting & Installation


Front(unit:mm)

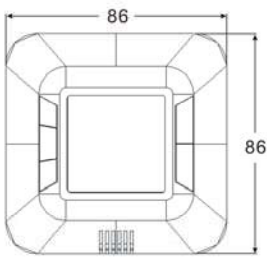


Thickness (unit:mm)

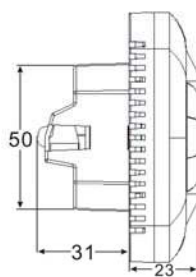


Mounting Hole (unit:mm)

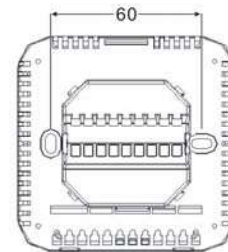


1

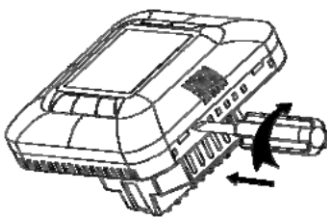

2

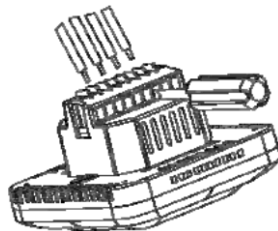

3

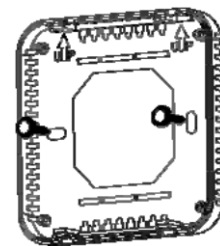

### Order

Part No	Com.Rating	Com. Rating	Room Sensor	Floor Sensor	Remark
	Max 3A	Max. 16A			
HT01-3R	√		√		Water Heating System
HT01-16R		√	√		Electric Heating System
HT01-16RF		√	√	√	Electric Heating System